MODEL: 80490CH
PACKING DIAGRAM

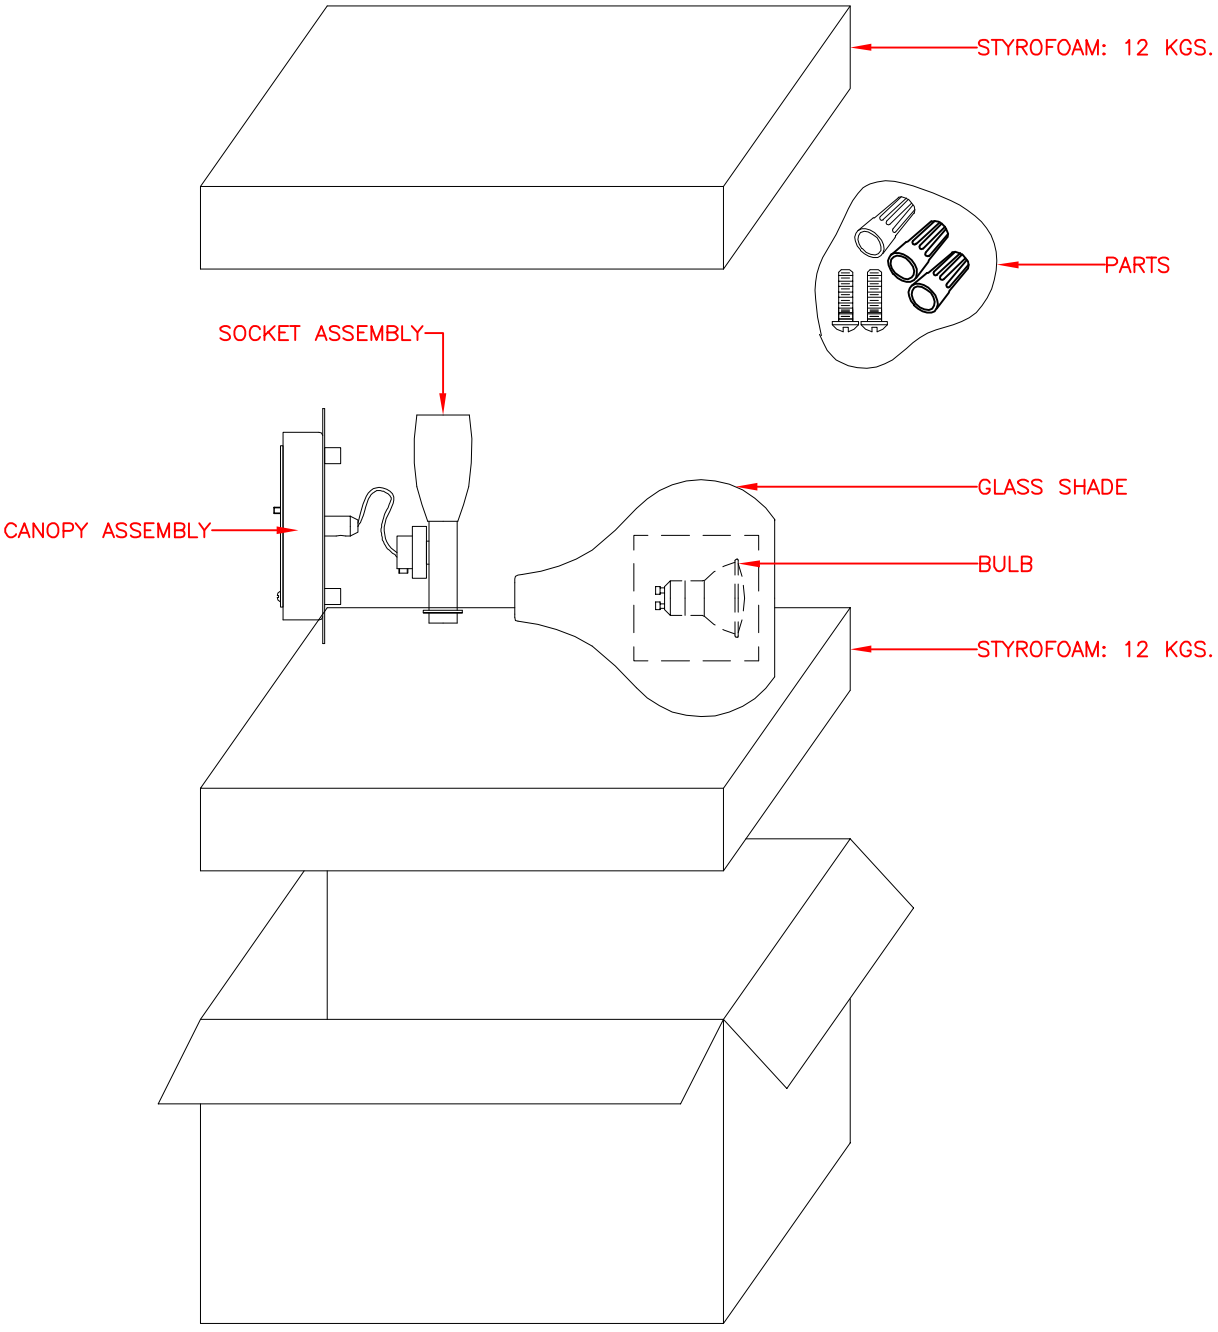

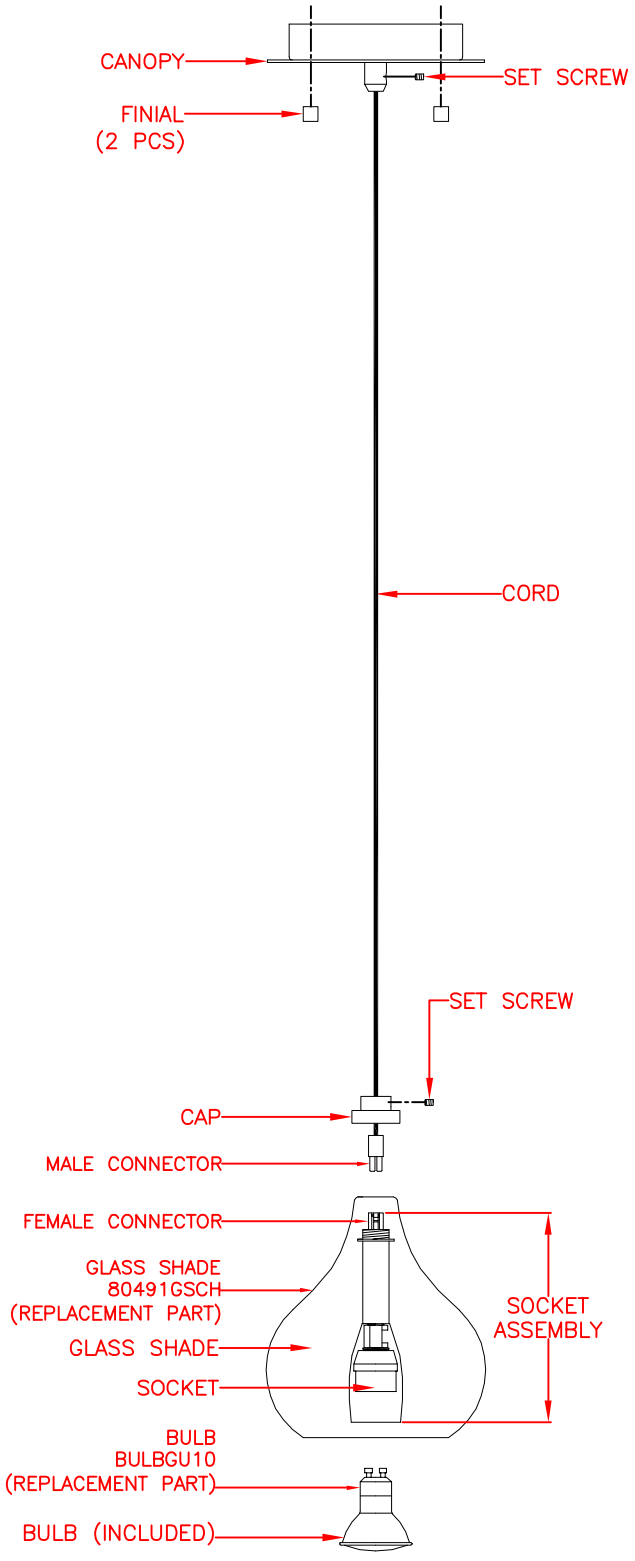

MODEL: 80490CH

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: LADDER, SCREWDRIVER AND WIRE CUTTERS.

UNPACK THE FIXTURE

YOU SHOULD HAVE RECEIVED THE FOLLOWING: CANOPY, CAP, GLASS SHADE, SOCKET ASSEMBLY, (2) SET SCREWS AND (2) BULBS. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

MOUNTING HARDWARE PACKAGE:
(4) 8–32 x 1–1/4" SCREWS, MOUNTING PLATE, GREEN GROUND SCREW, (3) WIRE CONNECTORS, (2) NUTS AND (2) FINIALS.

FIXTURE ASSEMBLY

1. DETERMINE THE LENGTH OF CORD REQUIRED TO HANG THE FIXTURE AT THE DESIRED HEIGHT, ADJUST THE CORD BY UNSCREWING SET SCREW NEAR CANOPY, THEN SECURE THE CORD TO CANOPY BY TIGHTENING SET SCREW.

STOP COMPLETE INSTALLATION INSTRUCTIONS ON NEXT PAGE BEFORE CONTINUING TO FINAL ASSEMBLY.

FINAL ASSEMBLY

1. SLIDE CAP OVER MALE CONNECTOR AND PLACE GLASS SHADE OVER SOCKET ASSEMBLY.

2. JOIN THE MALE CONNECTOR AND FEMALE CONNECTOR TOGETHER.

3. SCREW THE CAP TO TOP OF SOCKET ASSEMBLY AND TIGHTEN SET SCREW.

4. INSTALL A 35 WATT MAX. GU10 BULB (INCLUDED) INTO SOCKET.

5. RESTORE POWER, YOUR NEW FIXTURE IS NOW READY FOR USE.

AVAILABLE PARTS ARE:
80491GSCH (GLASS SHADE)
BULBGU10 (BULB)

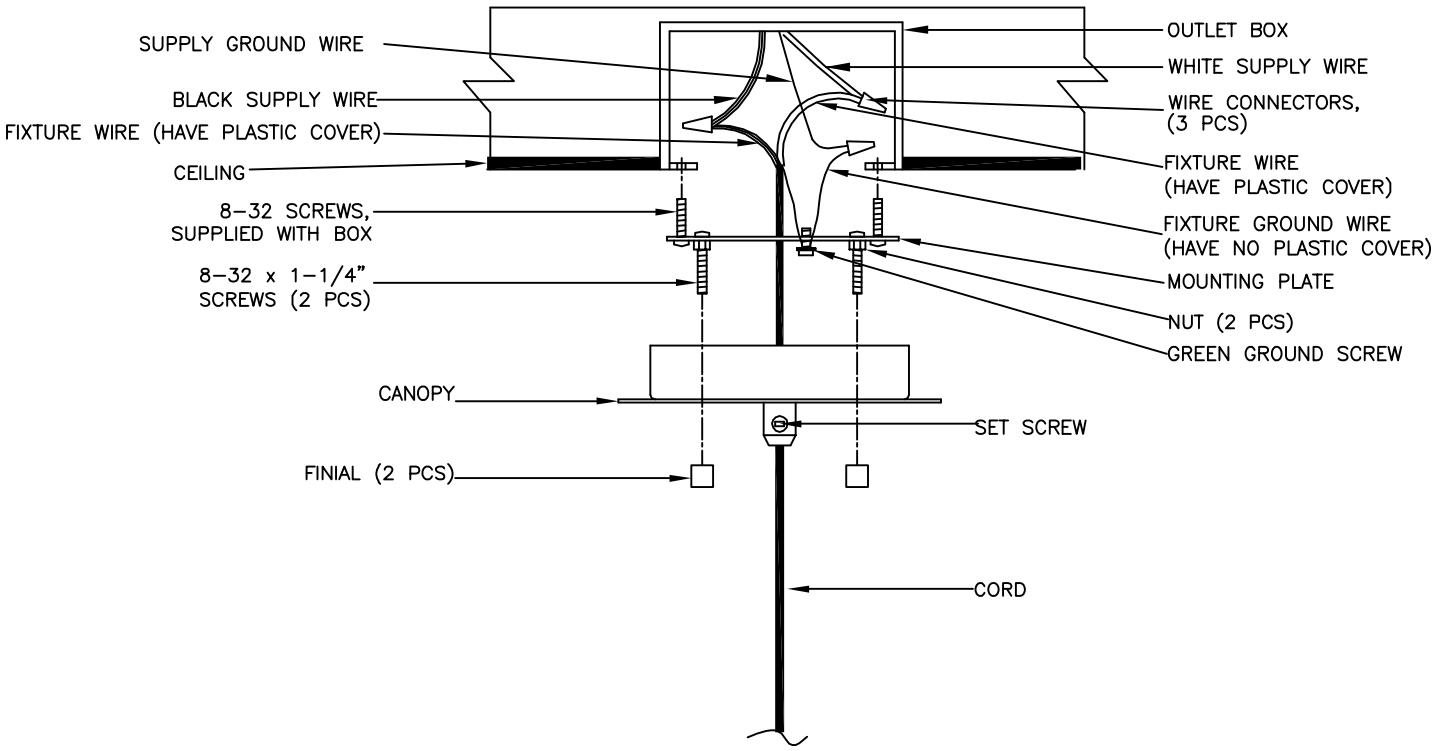

INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

CAUTION

TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRSTLY, TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

** IF YOU DO NOT HAVE ELECTRICAL WIRING EXPERIENCE, HAVE YOUR FIXTURE INSTALLED BY A QUALIFIED LICENSED ELECTRICIAN.

*** THIS FIXTURE IS TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE WEIGHT OF THIS FIXTURE. THE OUTLET BOX MUST BE DIRECTLY SUPPORTED BY THE BUILDING STRUCTURE.

INSTALL THE FIXTURE:

1. SCREW (2) 8–32 x 1–1/4" SCREWS INTO THE MOUNTING PLATE. (MAKING SURE THAT THEY LINE UP WITH THE HOLES IN THE CANOPY)

2. ATTACH THE MOUNTING PLATE TO THE CEILING OUTLET BOX USING THE TWO SCREWS PROVIDED WITH THE OUTLET BOX. (NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8–32 x 1 1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE).

3. CONNECT ONE FIXTURE WIRE THAT HAVE PLASTIC COVER TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST–ON WIRE CONNECTOR PROVIDED. CONNECT THE OTHER FIXTURE WIRE THAT HAVE PLASTIC COVER TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. INSTALL THE FIXTURE WIRE THAT HAVE NO PLASTIC COVER UNDER THE GREEN GROUND SCREW ON THE MOUNTING PLATE THEN CONNECT THE WIRE TO THE SUPPLY GROUND WIRE IN THE OUTLET BOX USING THE TWIST–ON WIRE CONNECTOR PROVIDED.

4. TUCK THE CORDS CAREFULLY INSIDE THE CANOPY. NEXT RAISE THE CANOPY TO THE CEILING AND SECURE IN PLACE WITH (2) FINIALS.

5. SEE PREVIOUS PAGE FOR FINAL ASSEMBLY INSTRUCTIONS.